How to set up InkPot ICC profile for SG400/SG800 using ICM on Windows (for all programs)

ICM mode is a special method of installing an ICC profile directly within the Windows operating system. This allows you to use ICC profiles even on programs that don't offer color management options, such as: Cricut Design Space, Silhouette Studio, GIMP, and many more!

Step 1: Download and move the profile

- 1. Download the profile you need either from our website or from an email we sent you.
- 2. Once downloaded, you will need to move the file to the system folder on your computer where all of your profiles are stored. The location will depend on what version of Windows you are running. Refer to the list below:

Windows 98/ME

C:\Windows\System\Color\

Windows XP/Vista/7/8/10

C:\Windows\System32\Spool\Drivers\Color\

Step 2: Set up the profile

🖭 All Control Panel Items		– 🗆 X		
← → → ↑ 🖭 > Control Panel > All	Control Panel Items		✓ ່ຽ Sear	rch Control Panel 🔎
Adjust your computer's settings				2 View by: Large icons 🔻
-01			Mass Backup and Restore	•
Administrative Tools	Audio Controls	AutoPlay	Windows 7)	BitLocker Drive Encryption
Color Management 3	Credential Manager	Date and Time	Default Programs	🧈 Device Manager
Devices and Printers	Ease of Access Center	File Explorer Options	File History	f Flash Player (32-bit)
Fonts	MP Client Security	Indexing Options	Infrared	Intel® Graphics Settings
Internet Options	Java	Keyboard	Mail (32-bit)	🧼 Mouse
Network and Sharing Center	Phone and Modem	Power Options	Programs and Features	QuickTime (32-bit)
Recovery	Region	RemoteApp and Desktop Connections	Security and Maintenance	Sound
Speech Recognition	Storage Spaces	Sync Center	System	Taskbar and Navigation
Troubleshooting	Ser Accounts	Windows Defender Firewall	🔛 Windows To Go	Work Folders

- 1. Open the Control Panel.
- 2. Set *View by:* to *Large icons* (if it isn't already set that way) so that the Control Panel looks like the image above.
- **3.** Click on *Color Management*.

Color Management	X
Devices All Profiles Advanced	
	y monitors
Profile selection: 6 Manual Profiles associated with this device:	Associate Color Profile X
Name File name Artisan 1430 SP 1430 Standard Artisan 1430 SP 1430 Standard	The norme
Artisan 1430 SP 1430 Ultra Premium Presentation Matte Paper Artisan 1430 SP 1430 Ultra P Artisan 1430 SP 1430 Ultra Premium Glossy Artisan 1430 SP 1430 Ultra P Artisan 1430 SP 1430 Ultra Premium Glossy Artisan 1430 SP 1430 Ultra P	Pro38 EMP Pro38 EMP. Promium Pro38 ARMP Pro38 ARMP. Pro38 ARMP Pro38 ARMP.
Artisan 1430 SP 1430 Premium Luster Artisan 1430 SP 1430 Premiu Artisan 1430 SP 1430 Premium Glossy Artisan 1430 SP 1430 Premiu	Performance-Ultra - Epson P600-P800-P6000-P8000-R2880-R3000-3880-488 Performance-Ultra - Epson ium Gloss Performance-D - Epson Stylus C88+ - InkOwl Profile Performance-D - Epson St
Artisan 1430 SP 1430 Photo Qlty UP Artisan 1430 SP 1430 Photo Artisan 1430 SP 1430 Photo Paper Glossy Artisan 1430 SP 1430 Photo Artisan 1430 SP 1430 Matte Paper-HW Artisan 1430 SP 1430 Matte	Paper Gl Performance-D - 4 colors - Sublimation Transfer Paper - InkOwl Profile Performance-D - 4 colors
InkOwl PR for SG400 800 InkOwl PR for SG400 800.icm 7 Add Remove 9 Set as Default	
Understanding color management settings	Profiles

- 4. Under the *Devices* tab, for *Device*, select the Sawgrass SG400 RPCS-R or SG800 RPCS-R printer from the dropdown menu.
- 5. Check the box labeled *Use my settings for this device*.
- 6. For Profile selection, choose Manual.
- 7. Click on Add...
- 8. Click on the profile you just downloaded and the click OK.
- 9. Select the added profile then click on *Set as Default Profile*.
- 10. Click Close.


Step 3: Printing with ICM mode

Click the Print option in your image editing program. Select the Sawgrass **SG400 RPCS-R** or **SG800 RPCS-R** printer as your printer and then follow the needed steps (will vary depending on the image editing program being used) to access your Printer Preferences (see image below).

Once in the Printing Preferences menu, follow the steps below to ensure you are printing with the optimal print settings for our profile.

- **1.** In the *Paper Type* dropdown menu, select the option *Postcard*.
- 2. In the *Select Print Quality* dropdown menu, select the option *High Quality*.
- 3. Click on the *Detailed Settings* tab.
- 4. In the *Menu:* list of options, select the option *Print Quality*.
- 5. In the *Color Profile:* dropdown menu, select the option *Use ICM.*
- 6. In the *Gray Reproduction:* dropdown menu, select the option *CMYK for Image.*
- 7. Go back to the original screen by clicking on *One Click Presets*.
- 8. Click on *Register Current Settings...* so that you can save these settings as a preset for your convenience later.
- 9. Press OK to apply these settings.

Press print! The profile will be applied to your design as it is sent out to the printer. Don't forget to mirror your images if required!

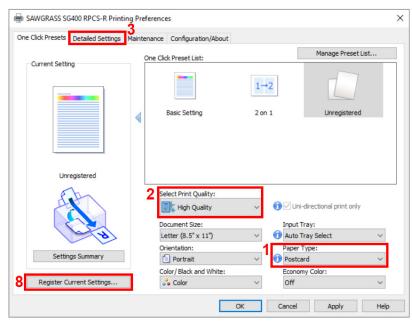

e Click Presets Detailed Settings	Maintenance Configuration/About	
	Menu: 4	
Current Setting		¥ 👘
	Edit Finishing Print Quality Eff	ects Driver Option
	٢	
	Print Quality	Restore Defaults
	 High Quality U Quality 	× .
	Adjust Height ① Uni-directional print only Standard	
		~
Unregistered	Dithering: Use error diffusion: auto (image)	
Unregistered	5 Color Profile:	
Fabr	Use ICM	
A.S.	Color Profile Method:	
	By Host System 🗸	
K	ICM Intent:	
	🕕 Pictures (Perceptual)	
Settings Summary	Gray Reproduction:	
	CMYK for Image V	